

Instruments (Continued)

- 1 To change the setting mode B, turn the ignition switch to the **I** (On) position while pressing **[SEL]** button until the display check is finished. The blinking of bar segment in the tachometer shows the currently applied REV indicator lighting RPM, and the numerical tachometer display shows it.
 - ▶ Tachometer bar segment is displayed as conventional display, regardless of set up display method.

- 2 Each time **[SEL]** button is pressed, the lighting RPM set value increase by 250 r/min (rpm) (one segment). When the lighting RPM set value exceeds the allowable range, the lighting RPM set value automatically returns to 4,000 r/min (rpm).
 - ▶ Press and hold **[SEL]** button to advance the lighting RPM set value fast.

Available Setting Range
4,000 -to- 10,500 r/min (rpm)