


Indicators

If one of these indicators does not come on when it should, have your dealer check for problems.

ABS (Anti-lock Brake System) indicator

Comes on when the ignition switch is turned to the **I** (On) position.
Goes off when your speed reaches approximately 10 km/h (6 mph).

If it comes on while riding:

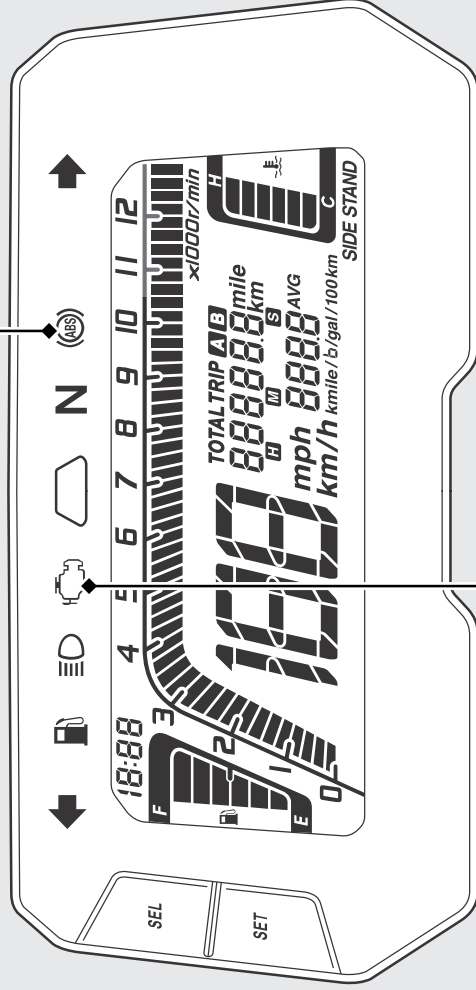

PGM-FI (Programmed Fuel Injection) malfunction indicator lamp (MIL)

Comes on briefly when the ignition switch is turned to the **I** (On) position with the engine stop switch in the **Q** (Run) position.

If it comes on while engine is running:

