

# Switches

## Headlight dimmer switch

-  : High beam
-  : Low beam


## Horn button

## Turn signal switch

- ▲ Pressing the switch turns the turn signal off.


## **PASS** Passing light control switch

Flashes the high beam headlight.

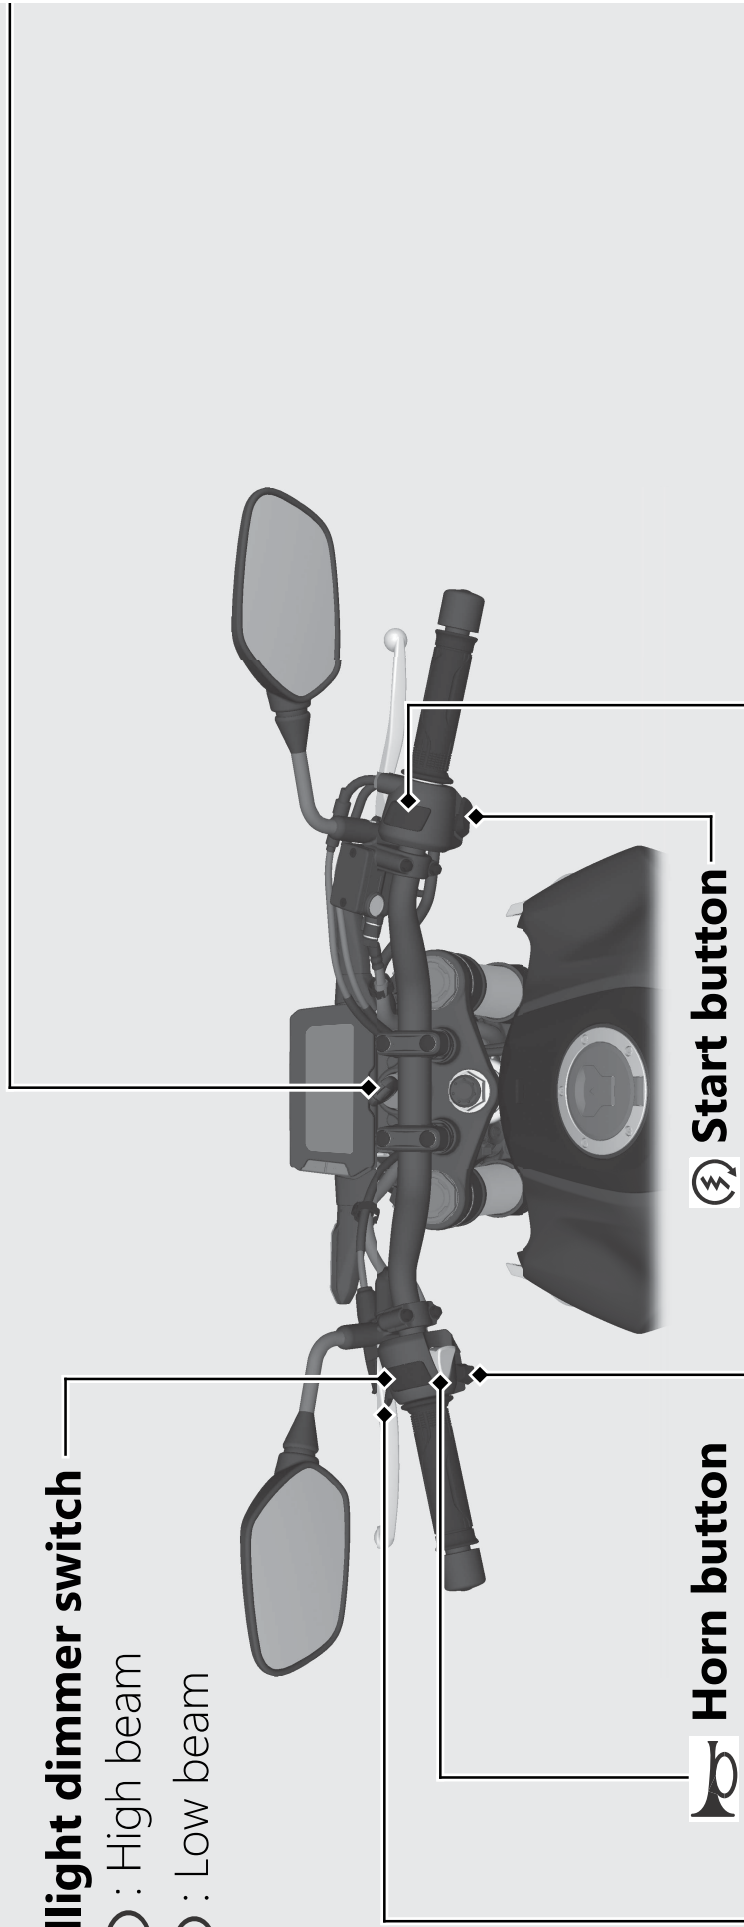

## Engine stop switch

Should normally remain in the  (Run) position.

- ▲ In an emergency, switch to the  (Stop) position (the starter motor will not operate) to stop the engine.