

## Ignition switch

Switches the electrical system on/off, locks the steering.

- ▶ Key can be removed when in the  (Off) or  (Lock) position.

 **(On)**

Turns electrical system on for starting/riding.

 **(Off)**

Turns engine off.

 **(Lock)**

Locks steering.

