


Battery

Removal

Make sure the ignition switch is in the **O** (Off) position.

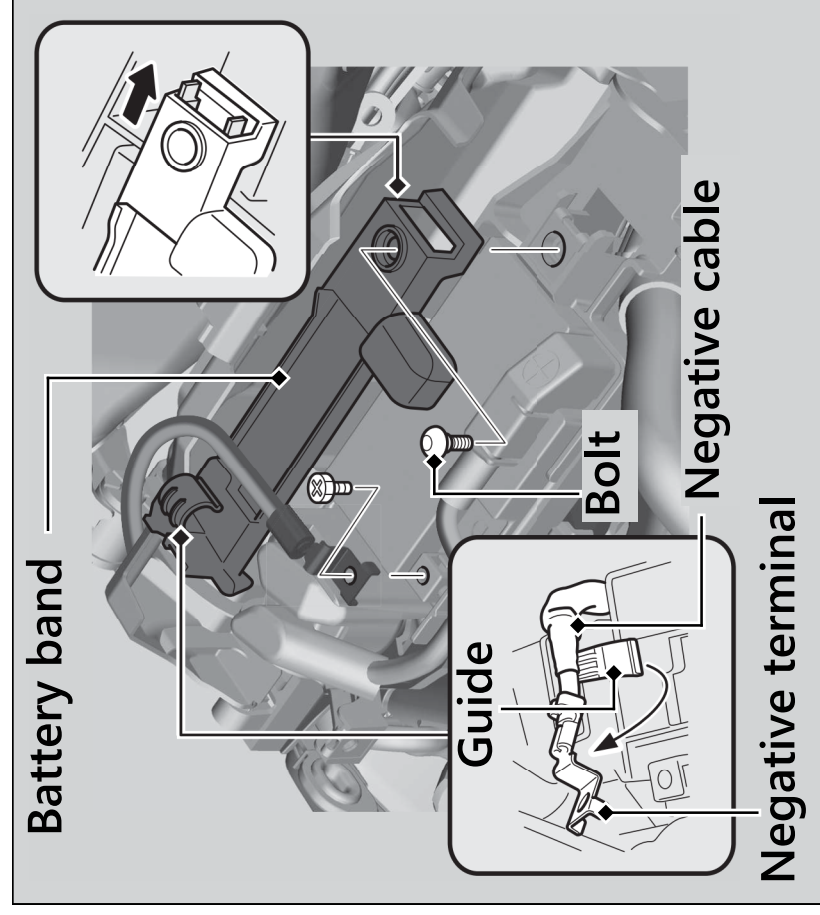

1. Raise the front of the fuel tank. **➔** P. 71
2. Disconnect the negative **⊖** terminal from the battery.
3. Remove the negative **⊖** cable from the guide.
4. Remove the bolt.
5. Slide the battery band and remove it.