


Fuel Tank Cover Assembly

Removal

1. Remove the front seat. [▶ P. 68](#)
2. Remove the bolts A.

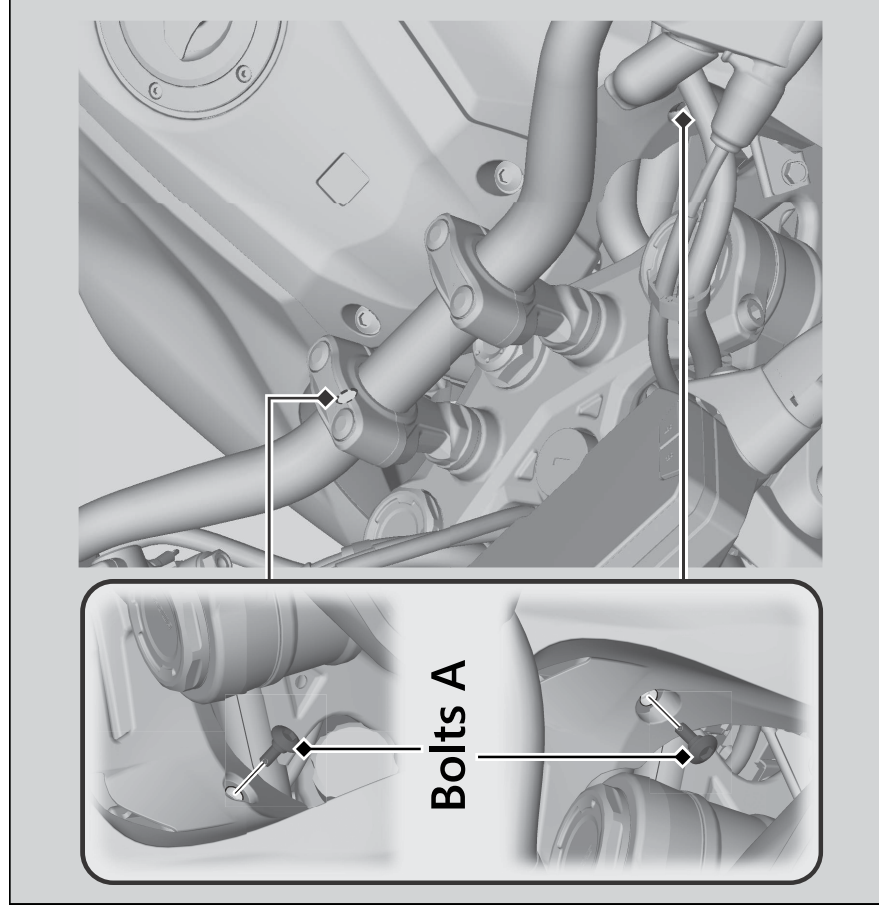

3. Remove the bolts B, bolts C, collars, bolt D and washer.

