

Shroud

The right and left shrouds can be removed in the same manner.

Removal

1. Remove the clip (➔ P. 67) and outer shroud bolt.
2. Remove the outer shroud by releasing the tab from the slot on the inner shroud.

