

10. Install a new sealing washer onto the drain bolt. Tighten the drain bolt.

Torque: 24 N·m (2.4 kgf·m, 18 lbf·ft)

11. Fill the crankcase with the recommended oil (► P. 56, ► P. 129) and install the oil fill cap.

Required oil

When changing oil & engine oil filter:

1.5 L (1.6 US qt, 1.3 Imp qt)


When changing oil only:

1.4 L (1.5 US qt, 1.2 Imp qt)

12. Check the oil level. ► P. 76
13. Check that there are no oil leaks.

NOTICE

Improper installation of the oil filter can result in serious damage to the engine.

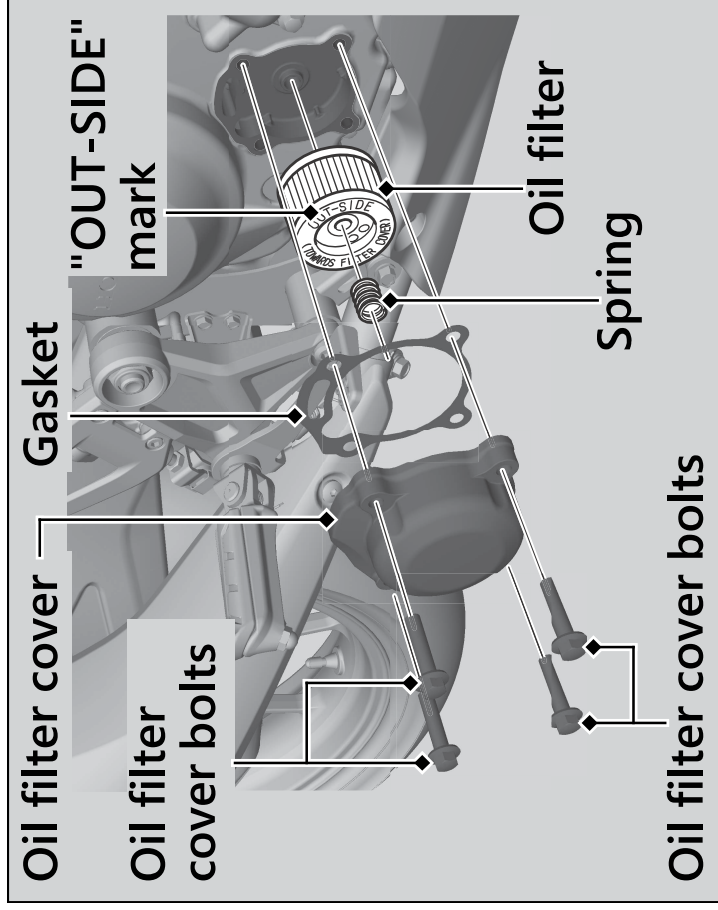

7. Install a new oil filter with its "OUT-SIDE" mark facing out.
8. Install the oil filter spring into the oil filter cover, and then install the oil filter cover with a new gasket.
9. Install and tighten the oil filter cover bolts.

Torque: 12 N·m (1.2 kgf·m, 9 lbf·ft)