

Adjusting the Headlight Aim

You can adjust vertical aim of the headlight for proper alignment. Turn the pinion in or out as necessary using provided Phillips screwdriver (➔ P. 64). Obey local laws and regulations.

