

Troubleshooting

Engine Will Not Start	P. 98	Unstable Engine Operation Occurs Intermittently	P. 115
Overheating (Segment H flashes in coolant temperature gauge)	P. 99		
Warning Indicators On or Flashing	P. 100		
PGM-FI (Programmed Fuel Injection)			
Malfunction Indicator Lamp (MIL).....	P. 100		
ABS (Anti-lock Brake System) Indicator	P. 101		
Other Warning Indications	P. 102		
Fuel Gauge Failure Indication.....	P. 102		
Tyre Puncture	P. 103		
Electrical Trouble	P. 111		
Battery Goes Dead.....	P. 111		
Burned-out Light Bulb	P. 111		
Blown Fuse	P. 114		