

## Starter Motor Operates But Engine Does Not Start

---

Check the following items:

- Check the correct engine starting sequence. ➔ P. 41
- Check that there is petrol in the fuel tank.
- Check if the PGM-FI malfunction indicator lamp (MIL) is on.
  - ▲ If the indicator lamp is on, contact your dealer as soon as possible.

## Starter Motor Does Not Operate

---

Check the following items:

- Check the correct engine starting sequence. ➔ P. 41
- Make sure engine stop switch is in the (Run) position. ➔ P. 38
- Check for a blown fuse. ➔ P. 114
- Check for a loose battery connection (➔ P. 65) or battery terminal corrosion (➔ P. 54).
- Check the condition of the battery.
  - ➔ P. 111

If the problem continues, have your motorcycle inspected by your dealer.