

## Tyre Puncture ► Removing Wheels

When removing and installing the wheel, be careful not to damage the wheel speed sensor and pulser ring.

### Front Wheel

#### Removal

1. Place your motorcycle on a firm, level surface.
2. Cover right side of the front wheel and brake caliper with protective tape or cloth.
3. Loosen the front axle nut.
4. Loosen the axle pinch bolt on both sides.
5. Support your motorcycle securely and raise the front wheel off the ground using a maintenance stand or a hoist.

