

4. Adjust the drive chain slack. ➔ P. 87
5. Install and tighten the rear axle nut.

Torque: 88 N·m (9.0 kgf·m, 65 lbf·ft)

6. Tighten the drive chain adjusting nuts lightly, then hold the adjusting nuts and tighten the lock nuts.
7. After installing the wheel, apply the brake pedal several times, then check if the wheel rotates freely. Recheck the wheel if the brake drags or if the wheel does not rotate freely.

If a torque wrench was not used for installation, see your dealer as soon as possible to verify proper assembly. Improper assembly may lead to loss of braking capacity.