 


Instruments *(Continued)*

 
Setting Mode A

1 To set the clock:


- 1 Turn the ignition switch to ON.
- 2 Press and hold **SEL** button and **SET** button until the hour digits start flashing.




- 3 Press **SEL** button until the desired hour is displayed.
 - ▶ Press and hold to advance the hour fast.



 
- 4 Press **SET** button. The minute digits start flashing.



 - 5 Press **SEL** button until the desired minute is displayed.
 - ▶ Press and hold to advance the minute fast.



 - 6 Press **SET** button. The hour and minute digits start flashing.
- 7 If necessary, press **SEL** button to select the second display.



- 8 Press **SET** button. The clock is set, and then the display moves to the backlight brightness adjustment.

