 


Instruments *(Continued)*

Setting Mode A

1 To set the clock:

 
- ! Turn the ignition switch to ON.
- ! Press and hold **[SEL]** button and **[SET]** button until the hour digits start flashing.



- ! Press **[SEL]** button until the desired hour is displayed.
- ▶ Press and hold **[SEL]** button to advance the hour fast.




- ! Press **[SET]** button. The minute digits start flashing.



- ! Press **[SEL]** button until the desired minute is displayed.
- ▶ Press and hold **[SEL]** button to advance the minute fast.



 - ! Press **[SET]** button. The hour and minute digits start flashing.
- ! If necessary, press **[SEL]** button to select the second display.



- ! Press **[SET]** button. The clock is set, and then the display moves to the backlight brightness adjustment.

