


2 Backlight brightness adjustment:

You can adjust the brightness five levels.

- ! Press **[SEL]** button. The brightness is switched.
- ! Press **[SET]** button. The backlight is set, and then the display moves to the activating/deactivating of tripmeter A, average fuel mileage and fuel consumption automatic reset mode.

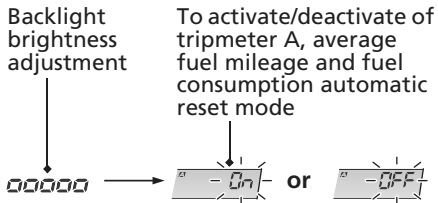

3 To activate/deactivate of tripmeter A, average fuel mileage and fuel consumption automatic reset mode:

You can also activate or deactivate the automatic reset mode by refueling after low fuel indicator lights. Deactivation is initially set.

- ! Press **[SEL]** button to select "000" (activate) or "OFF" (deactivate) in the automatic reset mode.
- ! To end the selection, press **[SET]** button. The activation/deactivation of automatic reset mode is set, and then the display moves to the changing of the speed and mileage unit.

