

## Instruments *(Continued)*

### 4 Changing the speed and mileage unit:

- ! Press **[SEL]** button to select either “mph” and “mile” or “km/h” and “km”.

When selecting the “mph” and “mile”.

- Fuel mileage unit shows “mile/gal”.
- Fuel consumption unit shows “gal”.

When selecting the “km/h” and “km”.

- Fuel mileage unit shows “km/l”.
- Fuel consumption unit shows “l”.

- ! Press **[SET]** button. The speed and mileage unit is set, and then the display moves to the changing of the coolant temperature gauge unit.

Changing the speed and mileage unit



Changing the coolant temperature gauge unit

