



**Low fuel indicator**

- Comes on when the ignition switch is turned on.
- Comes on when there is only reserve fuel left in the fuel tank. Remaining fuel when low fuel indicator comes on:  
0.92 US gal (3.5 liters)

**Low fuel indicator and reserve fuel consumption display:** ( P43)