

Troubleshooting

Engine Will Not Start	P. 180	Burned-out Light Bulb	P. 195
Overheating (High coolant temperature indicator is on)	P. 181	Blown Fuse	P. 198
Warning Indicators On or Flashing	P. 182		
Low Oil Pressure Indicator	P. 182		
PGM-FI (Programmed Fuel Injection)			
Malfunction Indicator Lamp (MIL).....	P. 182		
ABS (Anti-lock Brake System) Indicator	P. 183		
HESD (Honda Electronic Steering Damper)			
Indicator	P. 183		
Torque Control Indicator.....	P. 184		
Tire Puncture	P. 185		
Electrical Trouble	P. 194		
Battery Goes Dead.....	P. 194		