

Removing Wheels

Follow these procedures if you need to remove a wheel in order to repair a puncture.


When removing and installing the wheel, be careful not to damage the wheel speed sensor and pulser ring.

Front Wheel

Removal

1. Place your motorcycle on a firm, level surface.
2. Cover the both side of the front wheel and brake caliper with protective tape or cloth.

CBR1000RR/RA

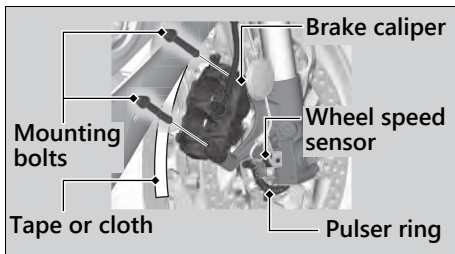

CBR1000S1

