

Blown Fuse

Before handling fuses, see “Inspecting and Replacing Fuses.” 📄 P. 130

Fuse Box Fuses

1. Remove the front seat. 📄 P. 140
2. Remove the fuse box cover.
3. Pull the fuses out one by one with the fuse puller in the tool kit and check for a blown fuse. Always replace a blown fuse with a spare fuse of the same rating.
4. Reinstall the fuse box cover.
5. Reinstall the front seat.

