


I Main Fuse & FI Fuse

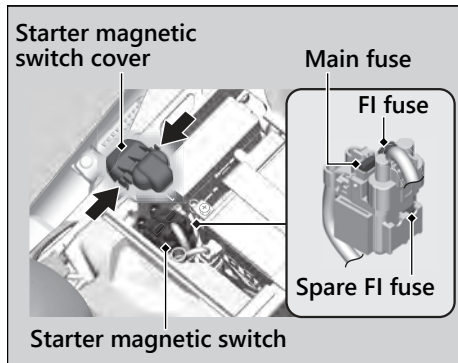

1. Remove the front seat. ► P. 140
2. Remove the starter magnetic switch cover.
3. Pull the main fuse and FI fuse out one by one and check for a blown fuse. Always replace a blown fuse with a spare of the same rating.
 - Spare main fuses are provided in the fuse box. ► P. 198
4. Reinstall parts in the reverse order of removal.

NOTICE

If a fuse fails repeatedly, you likely have an electrical problem. Have your motorcycle inspected by your dealer.