


## Blown Fuse

Before handling fuses, see “Inspecting and Replacing Fuses.” ➤ P. 41

### Fuse Box Fuses

1. Remove the front seat. ➤ P. 50
2. Open the fuse box cover.
3. Pull the fuses out one by one check for a blown fuse. Always replace a blown fuse with a spare of the same rating.
4. Close the fuse box cover.
5. Reinstall the front seat.

### (CBR250RA)

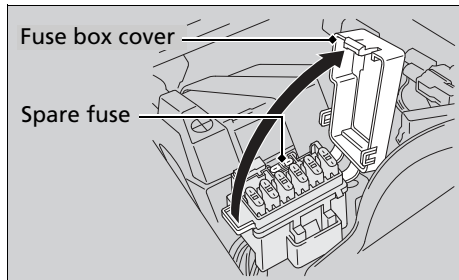

### (CBR250R)

