
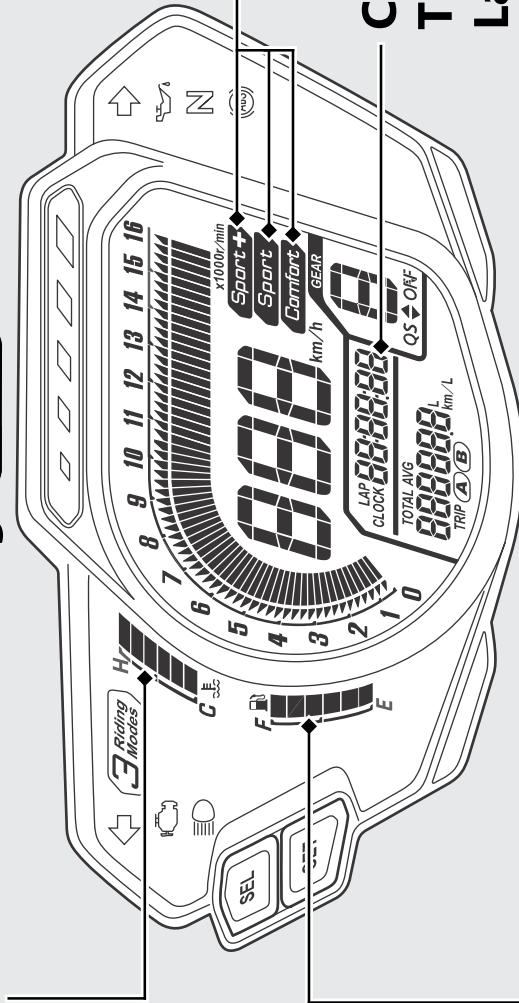


Coolant temperature gauge (C/E)

When the coolant is over specified temperature, the segment H flashes.

If it flashes while riding: P.84

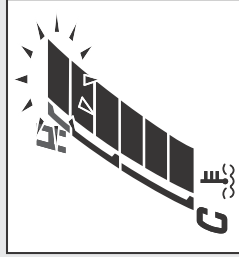

Riding mode indicator

P.39

Clock (12-hour display)/Lap timer

To set the clock: P.20

Lap timer: P.29

Fuel gauge

Remaining fuel when only 1st (E) segment starts flashing: approximately 3.2 L (0.85 US gal, 0.70 Imp gal)

If the fuel gauge indicator flashes in a repeat

pattern or turns off: P.87

