


Instruments (Continued)

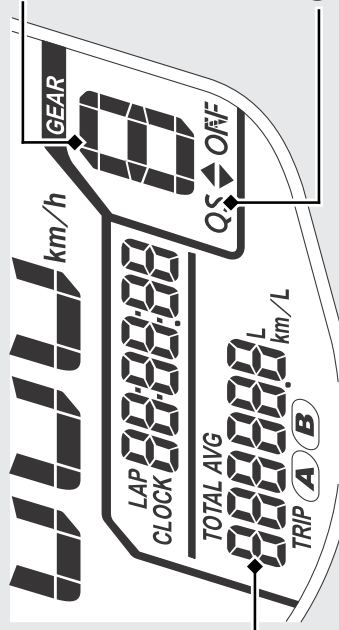

Gear position indicator

Shows 1st to 6th gear position. "—" appears when the transmission is not shifted properly.

Quick Shifter indicator P.44

Odometer [TOTAL] & Tripmeter [TRIP A/B] & Current fuel mileage meter &

Average fuel mileage meter [AVG] & Fuel consumption meter

SEL button selects the odometer, tripmeter A, tripmeter B, current fuel mileage, average fuel mileage and fuel consumption.

To reset the tripmeter: P.18

