


Instrument (Continued)

To reset the tripmeter, average fuel mileage and average fuel consumption

To reset tripmeter A, average fuel mileage, and fuel consumption together, press and hold **SET** button with tripmeter A, average fuel mileage, or fuel consumption displayed. When they are reset, "0.0" is displayed at each indication, and then the display returns to the last selected indication.

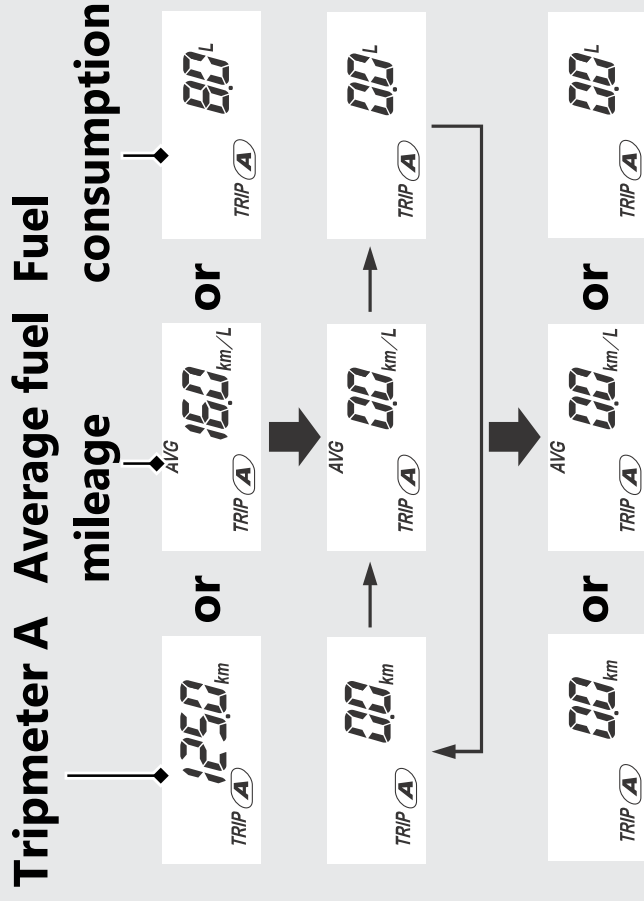

Also, the tripmeter A, average fuel mileage, and fuel consumption will automatically reset by refuelling after 1st (E) segment of the fuel gauge starts flashing and riding your vehicle for 0.1 km (0.06 mile). You can activate or deactivate the automatic reset mode by refuelling. **➔ P.19**

To reset tripmeter B, press and hold **SET** button with tripmeter B displayed.

