

# Maintenance

Please read “Importance of Maintenance” and “Maintenance Fundamentals” carefully before attempting any maintenance. Refer to “Specifications” for service data.

<b>Importance of Maintenance</b> .....	P. 50	<b>Throttle</b> .....	P. 80
<b>Maintenance Schedule</b> .....	P. 51	<b>Other Adjustments</b> .....	P. 81
<b>Maintenance Fundamentals</b> .....	P. 54	Adjusting the Rear Suspension .....	P. 81
<b>Tool</b> .....	P. 64		
<b>Removing &amp; Installing Body Components</b> ..	P. 65		
Battery .....	P. 65		
Front Seat .....	P. 66		
Rear Seat .....	P. 67		
<b>Engine Oil</b> .....	P. 68		
<b>Coolant</b> .....	P. 70		
<b>Brakes</b> .....	P. 72		
<b>Side Stand</b> .....	P. 75		
<b>Drive Chain</b> .....	P. 76		
<b>Clutch</b> .....	P. 77		