


Adjusting the Clutch Lever Freeplay

■ Minor Adjustment

Attempt adjustment with the minor clutch cable adjuster first.

1. Loosen the minor lock nut.
2. Turn the minor clutch cable adjuster until the freeplay is 10 - 20 mm (0.4 - 0.8 in).
3. Tighten the minor lock nut and check the freeplay again.

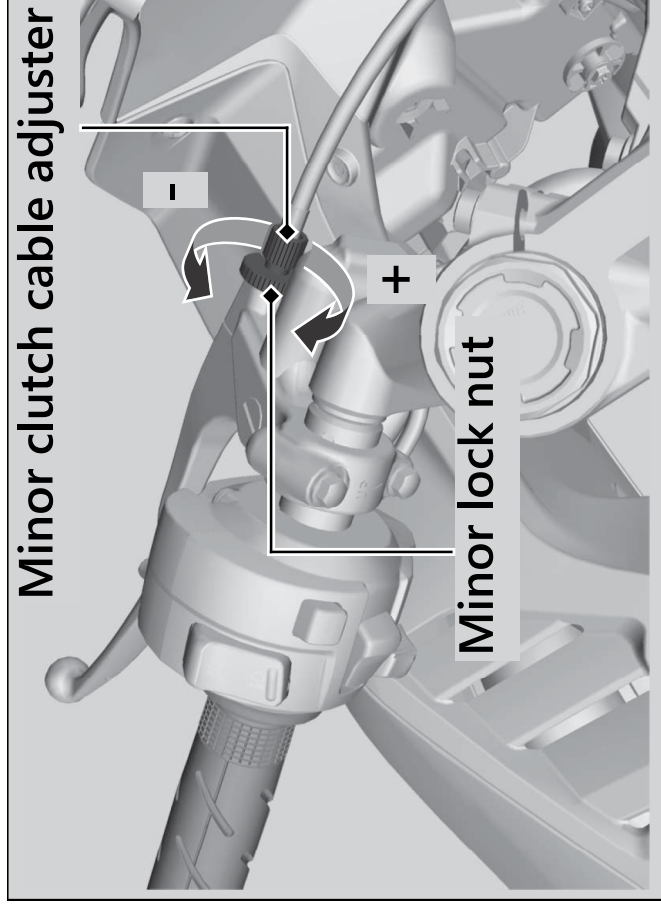

■ Major Adjustment

If the minor clutch cable adjuster is threaded out near its limit, or the correct freeplay cannot be obtained, attempt adjustment with the major clutch cable adjuster.