


### 3 Activating/deactivating of tripmeter A, average fuel mileage and fuel consumption automatic reset mode:

You can also activate or deactivate the automatic reset mode by refueling after 1st (E) segment of the fuel gauge starts flashing. Deactivation is initially set.

- !a Press **SEL** button to select "On" (activate) or "OFF" (deactivate) in the automatic reset mode.

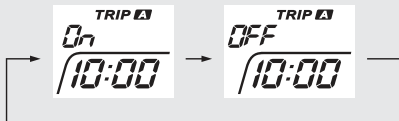

- !b To end the selection, press **SET** button. The activation/deactivation of automatic reset mode is set, and then the display moves to the changing of the speed and mileage unit.