

The following moves the ordinary display at display setting.

 
- The buttons is not pressed for about 30 seconds
- Turn the ignition switch to the OFF position and then to the ON position

### 1 Clock setting:

- 1 Turn the ignition switch to the ON position.
- 2 Press and hold **SEL** button and **SET** button until the hour digits start flashing.
- 3 Press **SEL** button until the desired hour is displayed.
  - ▶ Press and hold to advance the hour fast.



- 4 Press **SET** button. The minute digits start flashing.



- 5 Press **SEL** button until the desired minute is displayed.
  - ▶ Press and hold to advance the minute fast.



- 6 Press **SET** button. The clock is set, and then the display moves to the backlight brightness adjustment.