

# Troubleshooting

<b>Engine Will Not Start</b> .....	P. 90	Blown Fuse.....	P. 105
<b>Overheating (High coolant temperature indicator is on)</b> .....	P. 91		
<b>Warning Indicators On or Flashing</b> .....	P. 92		
Low Oil Pressure Indicator .....	P. 92		
PGM-FI (Programmed Fuel Injection)			
Malfunction Indicator Lamp (MIL) .....	P. 92		
ABS (Anti-lock Brake System) Indicator .....	P. 93		
<b>Other Warning Indications</b> .....	P. 94		
Fuel Gauge Failure Indication .....	P. 94		
<b>Tire Puncture</b> .....	P. 95		
<b>Electrical Trouble</b> .....	P. 102		
Battery Goes Dead.....	P. 102		
Burned-out Light Bulb .....	P. 102		