


Instruments *(Continued)*

Display Setting

Following items to change sequentially.

- Clock setting
- Backlight brightness adjustment
- Activating/deactivating of tripmeter A, average fuel mileage and fuel consumption automatic reset mode
- Changing of speed and mileage unit
- Changing of fuel mileage meter unit (only when km unit system is selected)

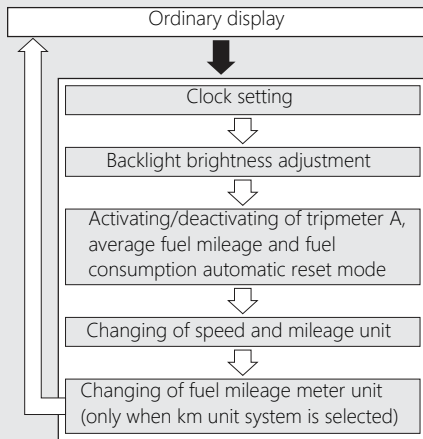

➡ Press and hold **SET** button and **SEL** button

⇨ Press **SET** button