

Starter Motor Operates But Engine Does Not Start

Check the following items:

- Check the correct engine starting sequence. ➡ P. 35
- Check that there is gasoline in the fuel tank.
- Check if the PGM-FI malfunction indicator lamp (MIL) is on.
 - ▶ If the indicator light is on, contact your dealer as soon as possible.

Starter Motor Does Not Operate

Check the following items:

- Check the correct engine starting sequence. ➡ P. 35
- Make sure engine stop switch is in the (Run) position. ➡ P. 32
- Check for a blown fuse. ➡ P. 101
- Check for a loose battery connection or battery terminal corrosion. ➡ P. 60, ➡ P. 49
- Check the condition of the battery.
 - ➡ P. 97

If the problem continues, have your motorcycle inspected by your dealer.