

**Engine**

Number.....	126
Oil.....	59, 76
Oil Filter.....	78
Overheats.....	101
Starting.....	39
Stop Switch.....	36, 119
Stopping.....	119
Will Not Start.....	100

<b>Environment</b> .....	125
--------------------------	-----

**Equipment**

Owner's Manual.....	44
Tool.....	43

**F**

<b>Flooded Engine</b> .....	39
-----------------------------	----

**Fuel**

Gauge.....	23
Oxygenated.....	132
Recommended.....	42
Remaining.....	23
Reserve Fuel Consumption.....	26
Tank Capacity.....	42

<b>Fuses</b> .....	58, 113
--------------------	---------

**G**

<b>Gasohol</b> .....	132
<b>Gasoline</b> .....	42
<b>Gear Position Indicator</b> .....	23

**H**

<b>Harness Band Clip</b> .....	70
<b>Hazard Switch</b> .....	36
<b>Headlight Aim</b> .....	97
<b>Headlight Dimmer Switch</b> .....	36
<b>High Beam Indicator</b> .....	35
<b>High Coolant Temperature Indicator</b> .....	34
<b>Honda Contacts</b> .....	136
<b>Horn Button</b> .....	36

**I****Ignition Cut-off System**

Banking Sensor.....	87, 119
Side Stand.....	87

<b>Ignition Key</b> .....	118
<b>Ignition Switch</b> .....	37, 119
<b>Indicators</b> .....	34
<b>Information Record</b> .....	142
<b>Instruments</b> .....	22