

## ■ Odometer [TOTAL]

Total distance ridden. When "-----" is displayed, go to your dealer for service.

## ■ Tripmeter [TRIP A/B]

Distance ridden since tripmeter was reset. When "-----.-" is displayed, go to your dealer for service.

### To reset the tripmeter: P.18

## ■ Current fuel mileage

Displays the current or instant fuel mileage. Display range: 0.0 to 99.9 km/L

- Initial display: "---.-" is displayed.
- When your speed is less than 6 km/h (4 mph): "---.-" is displayed.
- More than 99.9 km/L: "99.9" is displayed.

When "---.-" is displayed except for the above-mentioned cases, go to your dealer for service.

## ■ Average fuel mileage [AVG A/B]

The average fuel mileage A will be based on tripmeter A. The average fuel mileage B since tripmeter A was reset.

The average fuel mileage B will be based on tripmeter B. The average fuel mileage B since tripmeter B was reset.

Display range: 0.0 to 99.9 km/L

- Initial display: "---.-" is displayed.
- More than 99.9 km/L: "99.9" is displayed.
- When the tripmeter A or B is reset: "---.-" is displayed.

When "---.-" is displayed except for the above-mentioned cases, go to your dealer for service.

### To reset the average fuel mileage:

