


Rear Seat

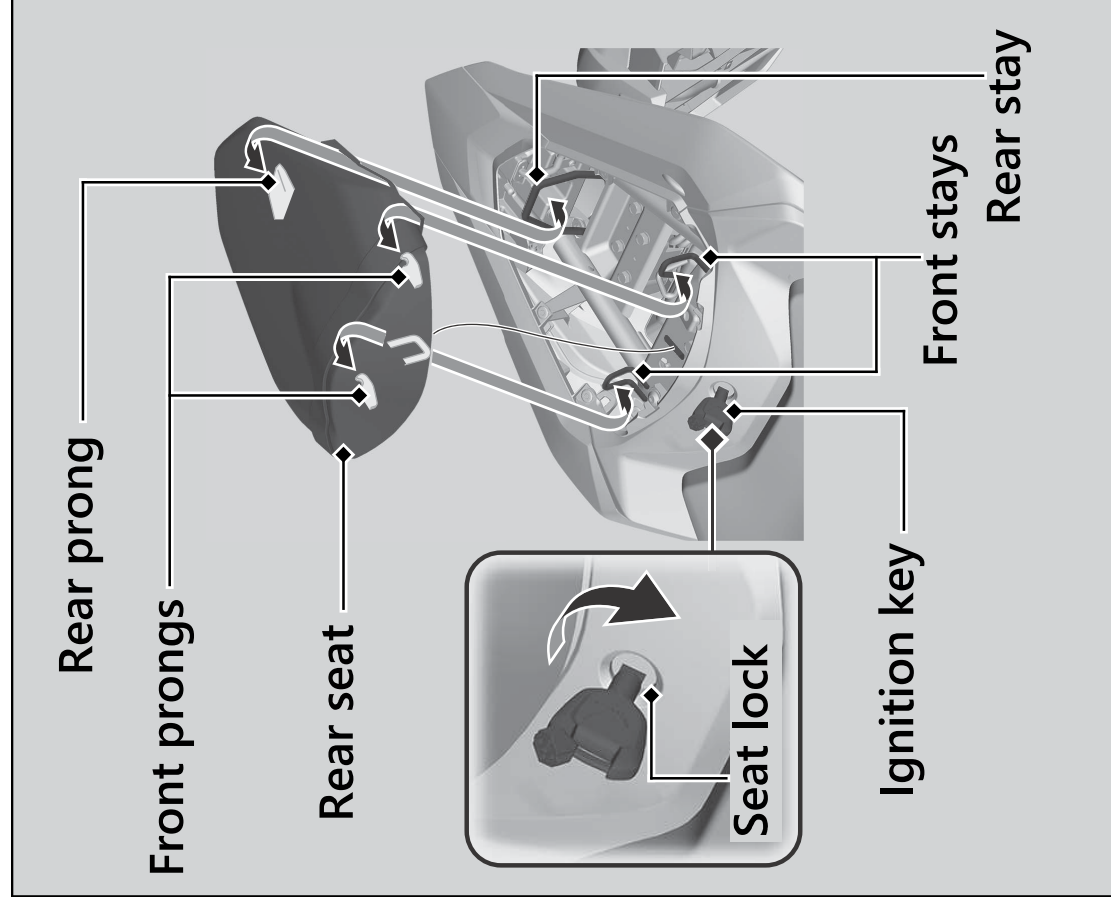

Removal

1. Insert the ignition key into the seat lock.
2. Turn it clockwise, then pull the rear seat forward and up.

Installation

1. Insert the front and rear prongs into the front and rear stays on the frame.
 2. Push backward and down on the rear of the rear seat until it locks in place.
- Make sure that the seat is locked securely in position by pulling it up lightly.

The seat locks automatically when closed. Take care not to lock your key in the compartment under the rear seat.