

Blown Fuse

Before handling fuses, see "Inspecting and Replacing Fuses." ► P. 41

Fuse Box Fuses

1. Remove the front seat. ► P. 51
2. Open the fuse box cover.
3. Pull the fuses out one by one with the fuse puller in the tool kit and check for a blown fuse. Always replace a blown fuse with a spare fuse of the same rating.
4. Close the fuse box cover.
5. Reinstall parts in the reverse order of removal.

