

Indicators

If one of these indicators does not come on when it should, have your dealer check for problems.

High coolant temperature indicator

Comes on briefly when the ignition switch is turned to the ON position.

If it comes on while riding:  **P.151**

PGM-FI (Programmed Fuel Injection) malfunction indicator lamp (MIL)

Comes on briefly when the ignition switch is turned to the ON position.

If it comes on while engine is running:

 **P.152**

Left turn signal indicator

Comes on briefly when the ignition switch is turned to the ON position.

Neutral indicator

Comes on when the transmission is in Neutral.

