


To operate handle grip heater

- 1** Start the engine. **↩P.200**
- 2** Select the handle grip heater display of pop-up information using the **[Fn]** function sel switch.

Function sel switch

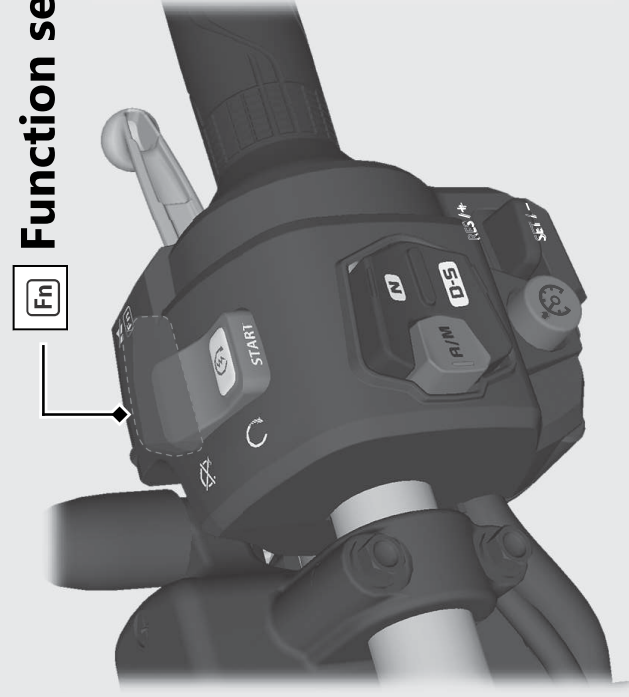

- 3** Push forward or pull backward the **[Fn]** function lever to select the handle grip heater level.

- ▲ The status icon will be appeared on the display when the handle grip heater operates.
- ▲ Do not leave the handle grip heater in the high position for a long time on a warm day.

