

Cruise Control *(Continued)*

To Change the Set Speed

To Fine Tune the Set Speed

- 1 Select the riding information. **➡P.38**
- 2 To increase the set speed: tap the **[RES / +]**
[SET / -] cruise control lever to **[RES / +]** side.

To decrease the set speed: tap the

[RES / +] **[SET / -]** cruise control lever to **[SET / -]** side.

- 3 The set speed is displayed in the multi-information display.



Cruise control set speed

Each quick tap (brief push and release) on either side will change your speed by 1 mph

or 1 km/h (depending on mileage meter set unit).

Any speed other than the possible setting range will not be indicated (stops at the upper or lower limit speed).

To Change the Set Speed Continuously

- To increase the set speed: push and hold the **[RES / +]** **[SET / -]** cruise control lever to **[RES / +]** side.

The system will accelerate your vehicle automatically. When you reach the desired speed, release the **[RES / +]** **[SET / -]** cruise control lever.

If the **[RES / +]** **[SET / -]** cruise control lever is pushed and held to **[RES / +]** side continuously, the set speed indicated in the multi-information display stops at the upper limit of the possible setting range.