

# Battery


---

The battery is located in the battery compartment under the seat.

## Removal

1. Make sure the ignition switch is OFF.
2. Remove the seat (pages 56).
3. Disconnect the negative (-) terminal (1) from the battery.
4. Disconnect the positive (+) terminal (2) from the battery.
5. Release the battery holder band (3) from the hook, then remove the battery (4) taking care not to drop the terminal nuts.

## UNDER SEAT

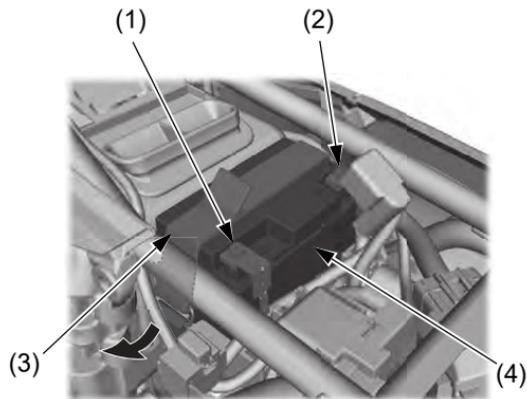

- (1) negative (-) terminal lead
- (2) positive (+) terminal lead
- (3) battery holder band
- (4) battery