

Maintenance Schedule

Perform the Pre-ride Inspection (page 13) at each scheduled maintenance period.

I: Inspect and Clean, Adjust, Lubricate or Replace if necessary. C: Clean. A: Adjust. L: Lubricate. R: Replace.

FREQUENCY	NOTE	Each race or about 2.5 hours	Every 3 races or about 7.5 hours	Every 6 races or about 15.0 hours	Every 9 races or about 22.5 hours	Every 12 races or about 30.0 hours	Ref. Page
FUEL LINE	(NOTE 6)	I				R	40
FUEL PUMP FILTER	(NOTE 6)					R	44
THROTTLE OPERATION		I					60
AIR FILTER	(NOTE 1)	C					56
CRANKCASE BREATHER		I					58
SPARK PLUG		I					67
VALVE CLEARANCE	(NOTE 4)			I			68-75
ENGINE OIL	(NOTE 3)	I		R			49
ENGINE OIL FILTER	(NOTE 3)			R			50
ENGINE IDLE SPEED		I					61
PISTON AND PISTON RINGS				R			79
PISTON PIN				R			80
TRANSMISSION OIL	(NOTE 5)	I		R			52
RADIATOR COOLANT	(NOTE 2)	I					54
COOLING SYSTEM		I					54
DRIVE CHAIN		I, L	R				97-99
DRIVE CHAIN SLIDER		I					97
DRIVE CHAIN ROLLER		I					98
DRIVE SPROCKET		I					99
DRIVEN SPROCKET		I					99
BRAKE FLUID	(NOTE 2)	I					91
BRAKE PADS WEAR		I					93
BRAKE SYSTEM		I					90
CLUTCH SYSTEM	(NOTE 5)	I					62
CONTROL CABLES		I, L					105
EXHAUST PIPE/MUFFLER		I					100
SUSPENSION		I					85, 86
SWINGARM/SHOCK LINKAGE			L				86
FORK OIL EXCEPT DAMPER	(NOTE 3)		R				87
FORK OIL DAMPER					R		115
NUTS, BOLTS, FASTENERS		I					106, 150-152
WHEELS/TIRES		I					94-96
STEERING HEAD BEARINGS					I		105

WE RECOMMENDED THESE ITEMS BE SERVICED BY REFERRING TO AN OFFICIAL HONDA SERVICE MANUAL.

This maintenance schedule is based upon average riding condition. Machine subjected to severe use require more frequent servicing.

- NOTE:
- 1.Clean after every moto for dusty riding condition.
 - 2.Replace every 2 years. Replacement requires mechanical skill.
 - 3.Replace after the first break-in ride.
 - 4.Inspect after the first break-in ride.
 - 5.Replace the transmission oil, if the clutch discs and plates are replaced.
 - 6.Replace every year.