


Mode Indicator

The mode indicator (1) is located in the engine mode select button (2). It should light for a few seconds and then go off when the engine is started.

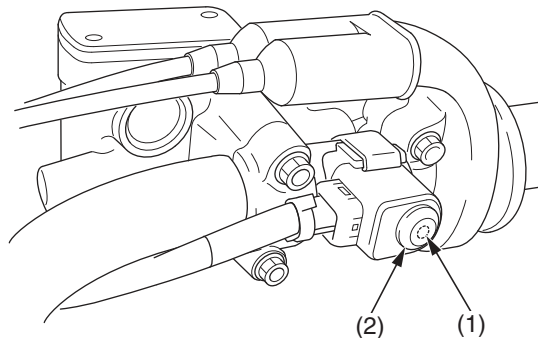

- (1) mode indicator
- (2) engine mode select button

The mode indicator indicates a selected mode when you operate the engine mode select button ([page 120](#)).

If the mode indicator stays on or does not come on when it should, have your dealer check it for problems.