

Starting the Engine *(Continued)*

If the engine does not start:

Using the start button

- ① Open the throttle fully and press the start button for 5 seconds.
- ② Follow the normal starting procedure.
- ③ If the engine starts with unstable idle, open the throttle slightly.
- ④ If the engine does not start, wait 10 seconds, then follow steps ① & ② again.

Using the kickstarter

- ① Turn the ignition switch to OFF.
- ② Open the throttle fully and crank the engine several times with the kickstarter.
- ③ Turn the ignition switch to ON.
- ④ Follow the normal starting procedure.
- ⑤ If the engine starts with unstable idle, open the throttle slightly.

■ If Engine Will Not Start  **P.77**