


Right Side Cover Assembly

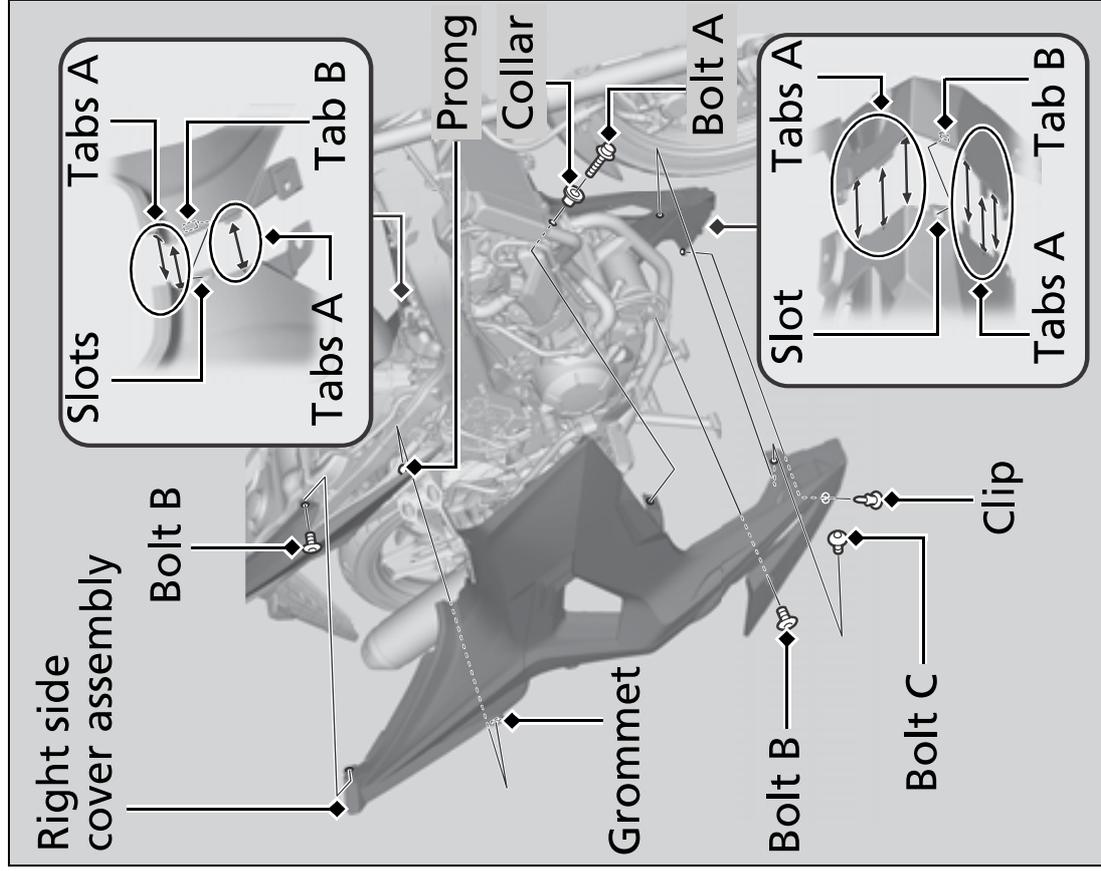

Removal

1. Remove the head pipe cover. ► P. 51
2. Open the seat. ► P. 28
3. Remove the battery maintenance cover. ► P. 49
4. Remove the clip. ► P. 50
5. Remove the bolt A/collar, bolts B and bolt C.
6. Release the tabs A and tabs B from the slots.
 - Carefully release the tabs.
7. Remove the right side cover assembly by releasing the grommet from the prong on the body cover.

Installation

Install the parts in the reverse order of removal.