

Checking Spark Plug

For the recommended spark plug, see "Specifications." ➔ P. 106

Use only the recommended type of spark plug in the recommended heat range.

NOTICE

Using a spark plug with an improper heat range can cause engine damage.

1. Remove the right side cover assembly.
➔ P. 52
2. Remove the left side cover mounting bolt/collar and radiator mounting bolt/collar.
3. Move the radiator to the left side and remove the grommets from the hooks.
4. Pull the radiator forward.

