



Headlight/Position Light

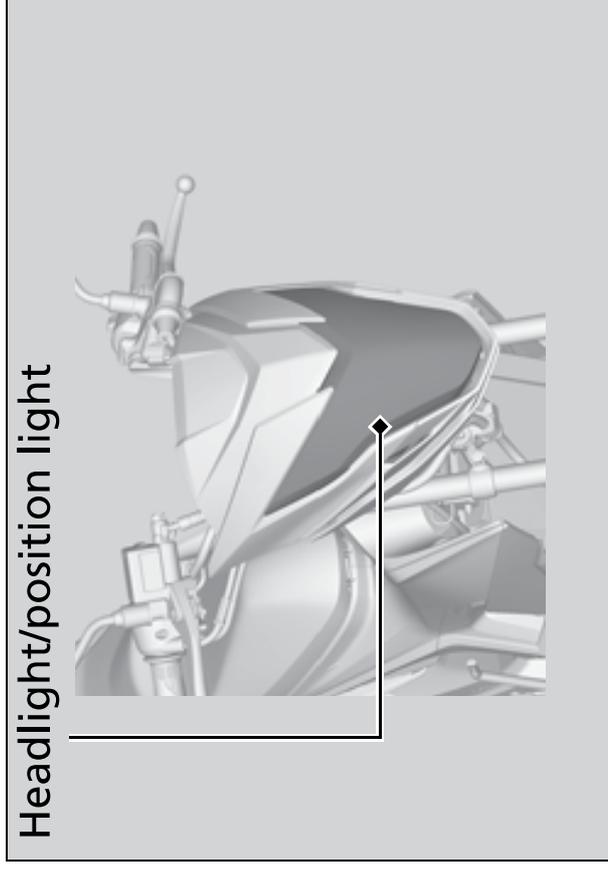

The headlight and position light use several LEDs.

If there is a LED which is not turned on, see your dealer for servicing.

Brake/Tail Light Bulb

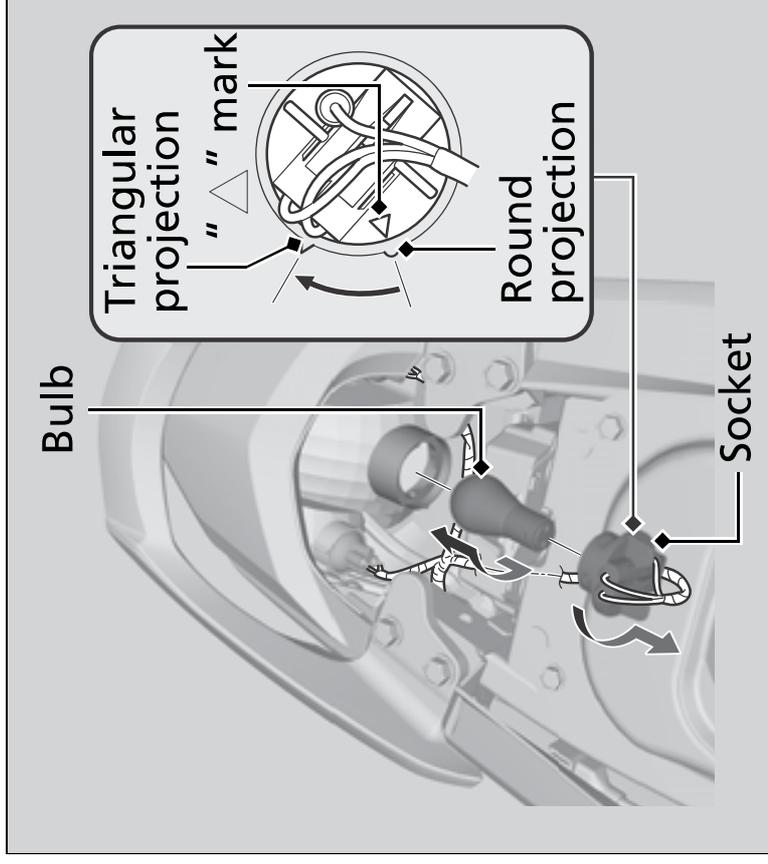

1. Open the seat. ► P. 28
2. Turn the socket counterclockwise and pull it out.
3. Slightly press the bulb in and turn it counterclockwise.