

Electrical Trouble ► Burned-out Light Bulb

4. Install a new bulb and parts in the reverse order of removal.
 - Install the socket by aligning its "△" mark with the round projection on the brake/tail light housing. Then turn it clockwise until the "△" mark is aligned with the triangular projection on the brake/tail light housing.
 - Use only the amber bulb.
5. Close the seat.

Front Turn Signal Bulb

1. Remove the bolts A.
2. Pull the front under cowl forward while releasing the hooks from the slots.

