


Blown Fuse

Before handling fuses, see “Inspecting and Replacing Fuses.” ► P. 38

Fuse Box Fuses

1. Remove the battery maintenance cover.
► P. 49
2. Open the fuse box covers.
3. Pull the fuses out one by one to check for a blown fuse. Always replace a blown fuse with a spare fuse of the same rating.
► Spare fuses are provided on back side of the battery cover. ► P. 47
4. Close the fuse box covers.
5. Reinstall parts in the reverse order of removal.

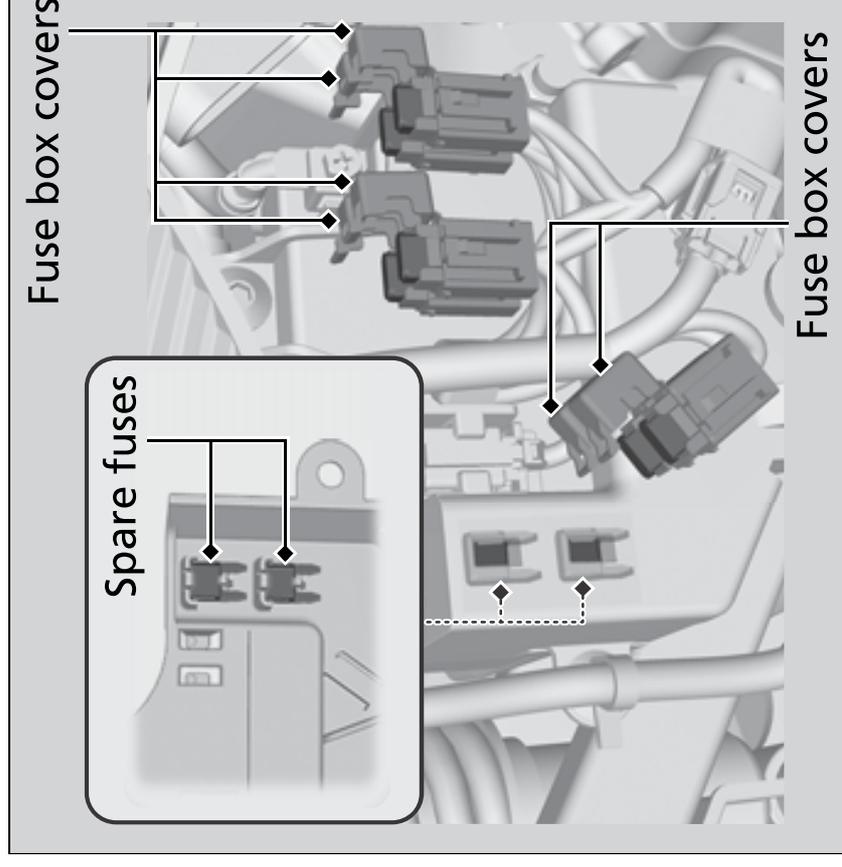

NOTICE

If a fuse fails repeatedly, you likely have an electrical problem. Have your motorcycle inspected by your dealer.