


Switches *(Continued)*


Ignition Switch

Switches the electrical system on/off, locks the steering.

Key can be removed when in the OFF or  (Lock) position.

ON
Turns electrical system on for starting/riding.

OFF
Turns engine off.

 **(Lock)**
Locks steering.

